

SH Series

Inline Heater System for Solvent or Gas

Installation and Operation Manual

This instruction manual explains the basic operation of the Process Technology inline solvent or gas heater. We recommend reading this manual carefully prior to operating the heater to help ensure proper use of the equipment. Please supply the model and serial numbers when ordering spare parts or when receiving technical assistance.



www.processtechnology.com

7010 Lindsay Dr., Mentor, OH 44060 Phone: 440-974-1300 Fax: 440-974-9561 USA/CN: 800-621-1998

Table of Contents

Related Documents.....	3
Section 1: Introduction.....	4
SH inline heater model number designation.....	5
Safety network	7
Section 2: Pre-Installation	8
Section 3: Installation	8
Uncrating and inspection.....	8
Mounting heater and control.....	8
Plumbing connections	9
Electrical connections.....	9
Incoming power connections.....	9
RS232/RS485 serial communications interface (optional)	9
Customer interface plug (optional)	9
Section 4: Temperature controller	10
Temperature controller E5CN	11
Display features	11
Operations for E5CN.....	12
Operation indicators	12
Using the keys	13
Mode parameter settings	14
Changing primary set point	16
High alarm.....	16
PID tuning	17
Operations for SLC	18
Safety limit controller	18
Programming	18
Section 5: Operation.....	19
System start-up	19
Normal operation.....	19
Shut down procedure	19
Section 6: Service and maintenance.....	19
Maintenance.....	19
Service policy	20
Warranty policy	21

RELATED DOCUMENTS

The following documents are to be used in conjunction with this manual:

ANSI/NFPA70 – National Electric Code[→], latest edition. To be used in conjunction with electrical service, wire sizing, routing and protection.

SEMI S2 – Semiconductor Equipment Safety Guidelines, latest edition. To be used in conjunction with safe operation, access and decommissioning procedures.

OMRON E5CN INSTRUCTION MANUAL – To be used to access features of the E5CN temperature controller. (Secure appropriate manual for any optional temperature controller used in place of the E5CN).


ANY – State or local building codes that would cover the electrical, mechanical, or physical installation of electrical heating equipment.

National Electric Code[→]
NFPA 1999 Copyright
National Fire Protection Association
Quincy, Mass. 02269

Section 1: Introduction

Process Technology's SH In-Line Heater is designed to provide energy-efficient, safe heating of solvents and non-flammable gasses (such as nitrogen). Wetted surfaces of the heater are constructed of chemically milled (etched) 316 stainless steel. The heater is a compact, completely welded, insulated, pressure resistant vessel. It is designed for use in either Single Pass or Multi-Pass Flow applications. The junction box includes two threaded couplings for optional gas fittings, which could be used to keep the junction box under positive gas pressure.

The SH In-Line Heater can withstand operation at a variety of temperature and pressure conditions. The maximum operating condition for the SH In-Line Heater is 160°C at 50 PSI.

 **Warning:** Safe operation of the equipment requires that each of the temperature sensors be wired properly into a customer supplied control system, in accordance with local regulations, where applicable. Refer to Section 3.5 for additional information. Failure to use the supplied temperature sensors for their intended purposes may void all or part of the equipment warranty. Consult factory for technical assistance.

This SH In-Line Heater consists of:

- * *316 stainless steel fluid path*
- * *304 stainless steel, insulated housing*
- * *Two J- type thermocouple Heater over-temperature sensors*
- * *One J-type thermocouple Process control sensor*
- * *TCO, over-temperature fuse*
- * *½-inch OD stainless steel tube inlet and outlet connections*

Optional Heater Equipment may include:


- * *E or K-type thermocouples or RTD temperature sensors*
- * *Custom inlet and outlet connections*

This SH In-Line heater control system consists of the following:

- * *Solid state control relays*
- * *PID temperature controller (series E5CK)*
- * *Over-temperature controller*
- * *Ground-fault protection (Earth leakage protection)*

Optional System Equipment may include the following:

- * *Circuit breaker and electrical disconnect*
- * *Built to SEMI and CE standards*
- * *Remote control electrical interface*
- * *RS-232, RS485 serial communication interface*


 **Warning:** The heater design and over-temperature protection devices vary depending on the specific application. This heater (reference model and serial numbers in Appendix) was designed and built for a specific inert gas heating application. This manual provides information for inert gas heating applications ONLY. This heater should not be used to heat process solvents or combustible fluids.

SH inline heater system model number designation:

Model / Part numbers are descriptive and usually follow this format.

Example:

SHV = SH In-Line Heater

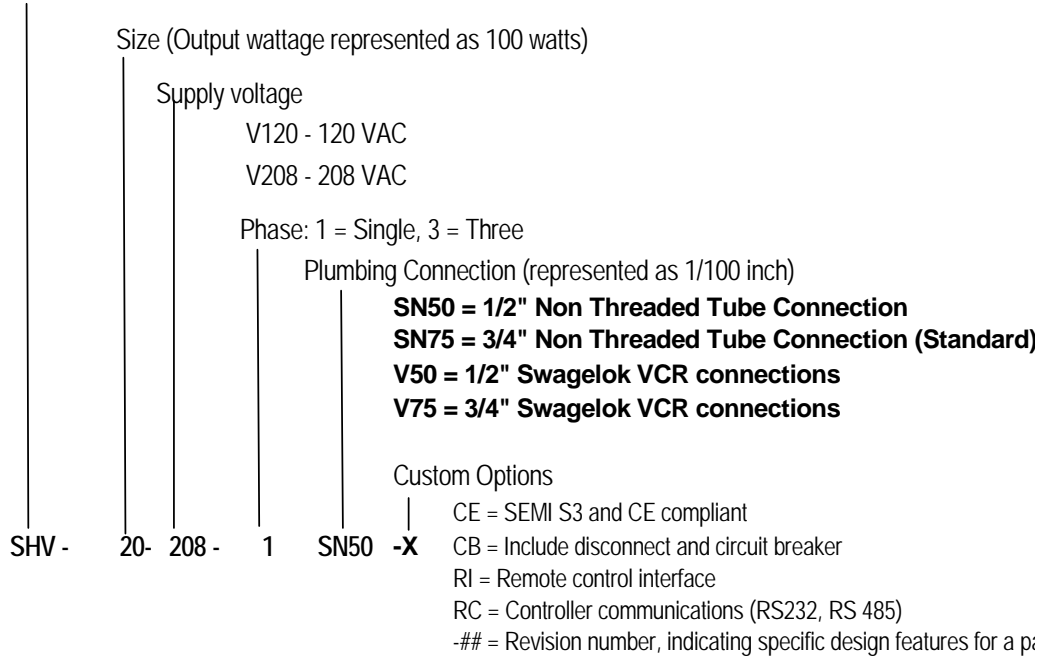

This example represents a 2kW, 208 VAC input voltage, single phase and 1/2 inch process connections.

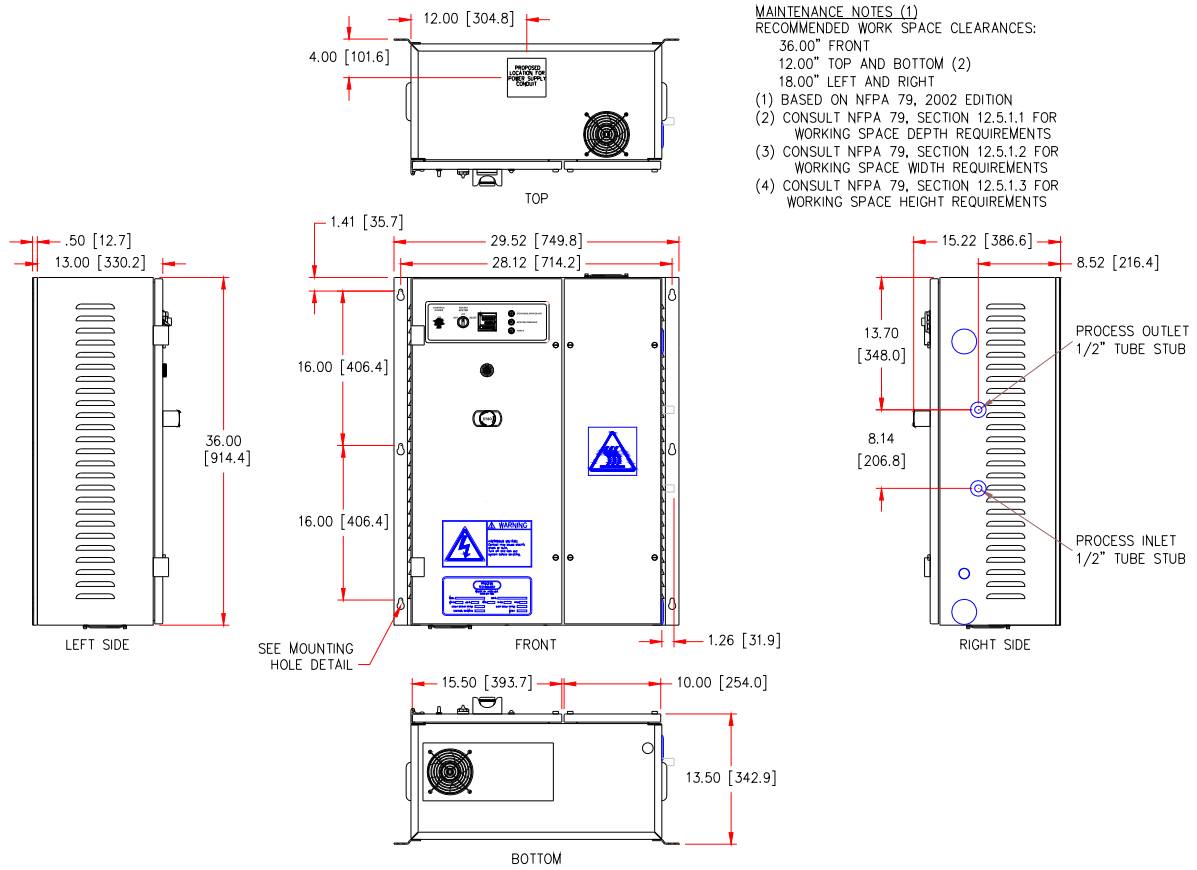


Figure 1: Dimensional Drawing.

SAFETY NETWORK:

The SH inline heater is protected from accidental damage or unsafe operating conditions with a network of safety interlocks. The safety interlocks will disengage power to the heaters until power is manually restored at the control. The safety interlocks offered on the SH inline heater are listed below.

TCO Heater Over-Temperature Fuse:

Any over-temperature situation will cause the main load contactor to disengage, and sound the audible alarm. This will require a manual reset of the heater once the overheat event has been corrected. The over temperature sensor has a fixed setting of 169°C (336°F). (Maximum Heater Temperature)

Safety Limit Controller (SLC):

This over-temperature controller is a separate controller mounted inside the control enclosure. It uses a separate temperature sensor to monitor the hot-zone temperature in the heater.

This over-temperature controller has two different settings:

1. Over-temperature cutoff (SP2). This setting needs to be adjusted manually by the customer, to be set at 135°F (57°C). This setting will cut off power to the heaters if the internal temperature rises above this value, but will automatically re-engage the heaters when the temperature drops below this value. This is not an alarm set point.
2. High Limit (HSP1). This high-temperature alarm setting is set at 145°F (63°C). If this temperature is detected at this sensor, the controller will disengage the main load contactor and sound the audible alarm. This will require a manual reset of the heater once the overheat event has been corrected.

Heat Sink Thermal Cutoff:

The heat sink for the solid state relays (SSRs) is equipped with a bimetallic temperature switch. If the cooling fan on the heat sink were to fail, the temperature of the heat sink would gradually rise, resulting in eventual SSR failure. This switch will cause the main load contactor to disengage, and sound the audible alarm. This will require a manual reset of the heater once the overheat event has been corrected. The over temperature sensor has a fixed setting of 176°F (80°C). (Maximum Heat Sink Temperature)

Section 2: Pre-Installation:

Note: Before beginning installation of the SH inline heater system, carefully read this entire section.

- 1) Space Requirements: The standard dimensions of the various models are shown in Table 2 (see appendix for custom made units). Allow additional space on all sides of the unit for the control ventilation and service access.

Dimensions			
kW	Width	Depth	Height
1-3	29 ½" (750mm)	13 ½" (343mm)	36" (915mm)

Table 2

- 2) Inlet and Outlet Plumbing: The SH inline heater is supplied with ½-inch tubes for inlet and outlet plumbing connections. Reference the specific model number ordered and section 1.1 "SH Inline heater system model number designation" of this manual to confirm the required plumbing connections.
- 3) Electrical Connections: The SH inline heater is supplied with customer specified power requirements. Reference the specific model number ordered and section 1.1 SHP inline heater system model number designation" of this manual for the required power requirements. Confirm these requirements by checking the product identification tag located on the lower face of the cabinet. Fuse the incoming power line for the rated amperage using an approved electrical disconnect box.

Section 3: Installation:

Uncrating and Inspection:

- 1) The SH inline heater systems are crated and shipped in a horizontal position. If the unit is not horizontal, return the crate to a horizontal position and inspect carefully.
- 2) Remove front side of the crate.
- 3) Remove the protective packaging material.
- 4) Remove the unit from crate by grasping the sides of the cabinet and lifting out of the crate.
- 5) Inspect the unit for any apparent damage.

Mounting Heater and Control:

- 1) Location: SH inline heater systems are designed for remote installation, keeping point of use areas uncluttered and free of potential obstructions. The unit is designed to use a minimum amount of wall space making chase areas a suitable location for installation.
- 2) Mounting: The SH inline heater system is designed to be wall mounted and should be placed in a vertical and level position.

Plumbing Connections:

Process Line Connections:

- 1) Remove the protective plastic caps from inlet and outlet plumbing on the heater.
- 2) Locate the inlet and make the required connection to the customer supplied fitting. (Do not reverse).
- 3) Tighten the connection as required. Take care not to over-tighten.
- 4) Repeating the above procedure for the outlet plumbing.

Electrical Connections:

Incoming Power Connections:

SH inline heater systems are designed to operate on 3 wire, single phase, electrical supplies (2 power wires, 1 ground wire). All electrical connections should conform to local electrical codes and/or NFPA 70/79.

- 1) Check the system tag located on the equipment for Power Requirements. Do not operate this heater on Voltages other than the Voltage rating on the system tag.
- 2) Open the front cover on the left hand side of the cabinet by loosening cover screws.
- 3) Fuse the incoming line for the rated amperage using an approved electrical disconnect box.
- 4) Supply power to the unit from the electrical panel into the cabinet through the opening at the "service entrance". This opening will need to be made by the customer. Ensure that the wire has sufficient amp capacity to safely carry the power load.
- 5) Connect the leads from the incoming power line to the appropriate terminals (reference the Electrical Schematic) making sure not to disturb existing wiring. Use care that no loose strands of wire are exposed out of the Terminal Block. Torque all wires to the specified ratings located on the wiring diagrams and component labels.
- 6) Grounding is done internally from the Incoming Power Strip. Reference the wiring diagram in the appendix.

RS-232 / RS-485 Serial Communication Interface (Optional):

In units supplied with the RS-232 / RS-485 serial communication interface, the Temperature Controller is equipped with RS-232 / RS-485 Serial Communication capability for use with a customer-supplied host computer. If this option is used, all temperature and related parameters can be monitored or altered from the host computer. On standard units, the DB-9 receptacle(s), labeled REMOTE COMMUNICATIONS, is(are) located at the rear (or bottom) of the cabinet. An independent serial cable should be installed between the host computer and the DB-9 receptacle.

Customer Interface Plug (Optional):

The Auxiliary Equipment Interface Plug is used for communication between the Process Controller and customer-supplied devices. The interface plug is located on the rear (or bottom) of the Cabinet enclosure. Refer to dimensional drawings in the appendix.

- Reference the electrical drawings supplied in the appendix for options provided and proper interface connector pin orientation.

Section 4: Temperature Controller:

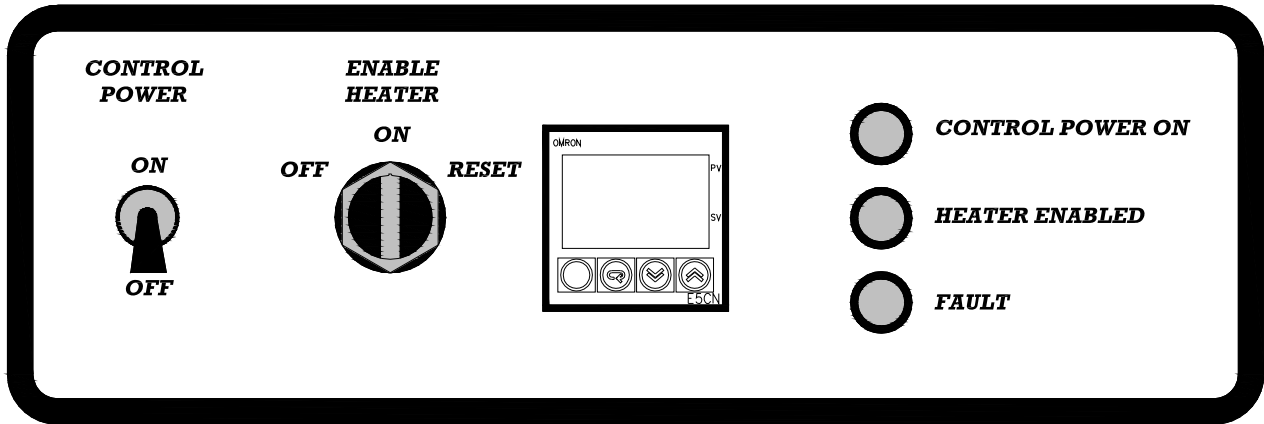


Figure 2: Temperature Controller and Control Panel.

The SH inline heater system incorporates a self-tuning, PID microprocessor based, digital temperature controller with a set high temperature alarm. The PID feature enhances the controller's ability to reach and maintain a constant process temperature. The self-tuning feature enables the controller to measure the process characteristics and indicate desired values, which can be displayed on LED displays.

This section provides a description of, and instructions for the Omron E5CN Controller. For a complete user guide, see the Omron website, www.omron.com.

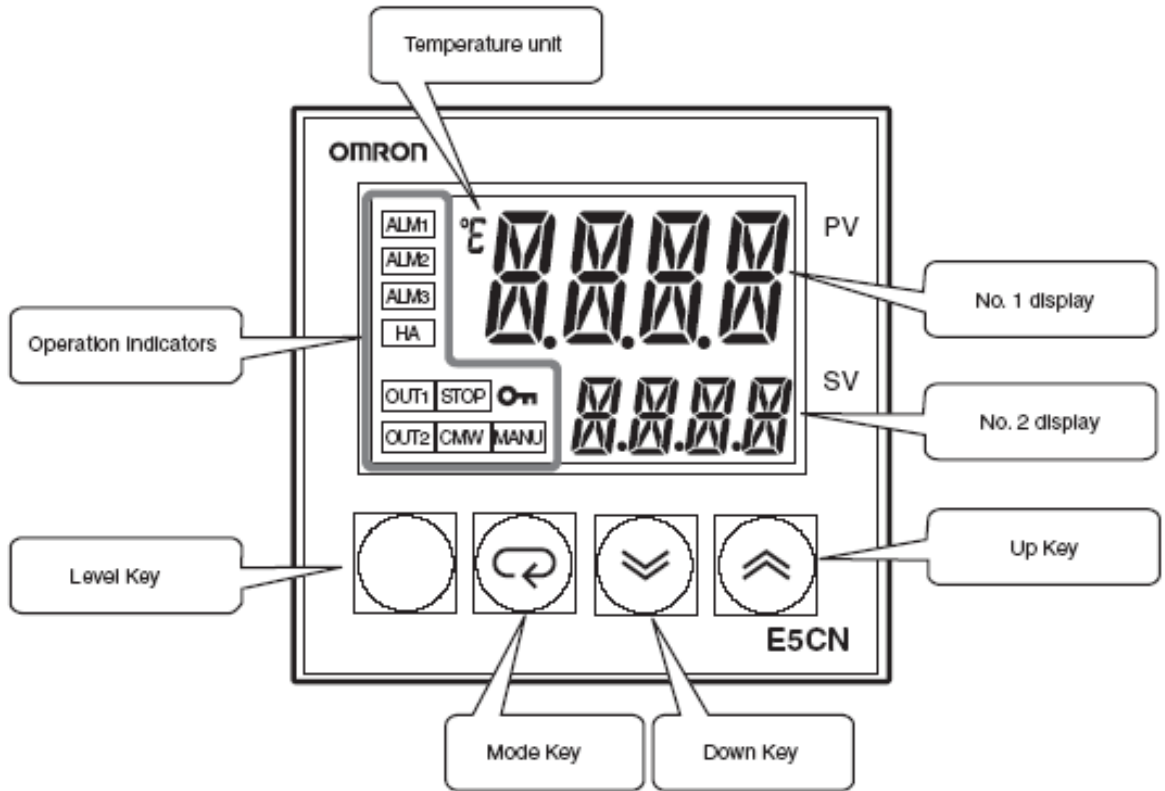


Figure 3: E5CN Temperature Controller.

DISPLAY FEATURES:

No. 1 display (PV): Shows the process value (outlet temperature), modes and parameter symbols.

No. 2 display (SV): Shows set points, parameter operation read value, or the variable input value.

Level key: Switches the controller between auto and manual operation.

Mode key: Press this key to change parameters within a setting level.

Up and Down arrow keys: Advances, increases or decreases the setting or values in the No. 2 display. Holding these keys down will speed up the rate of change.

OPERATIONS for E5CN:

Operation Indicators:

- ALM1:** Illuminates when the alarm 1 setting is ON (tripped) (120°C).
- ALM2:** Illuminates when the alarm 2 setting is ON (tripped) (110°C).
- ALM3:** Not available on this controller.
- HA:** Not available on this controller.
- OUT1:** Illuminates when the control output 1 is ON.
- OUT2:** Illuminates when control output 2 is ON (Not used).
- STOP:** Illuminates when the control operation has stopped.
- CMW:** Illuminates when communications wiring is enabled.
- On :** Illuminates when setting change protection is ON.
- MANU:** Illuminates when the controller is in Manual operation mode.

The following tables show the correspondence between symbols shown on the No.1 and No.2 displays and alphabetic characters.

<i>A</i>	<i>b</i>	<i>C</i>	<i>d</i>	<i>E</i>	<i>F</i>	<i>G</i>	<i>H</i>	<i>I</i>	<i>J</i>	<i>K</i>	<i>L</i>	<i>M</i>
A	B	C	D	E	F	G	H	I	J	K	L	M

 



<i>N</i>	<i>ō</i>	<i>P</i>	<i>Q</i>	<i>R</i>	<i>S</i>	<i>T</i>	<i>U</i>	<i>V</i>	<i>W</i>	<i>X</i>	<i>Y</i>	<i>Z</i>
N	O	P	Q	R	S	T	U	V	W	X	Y	Z

Figure 4: Omron Temperature Controller Display Symbols

OPERATIONS for E5CN (Continued):

Using the keys:

This section describes the basic functions of the front panel keys.

-  **Level Key:** Press this key to move between setting levels. The setting level is selected in the following order: operation level: adjustment level, initial setting level, communications setting level.
-  **Mode Key:** Press this key to change parameters within a setting level. The parameters can be reversed by holding down the key (moving one per second in reverse order).
-  **Up Key:** Each press of this key increments the value displayed on the No. 2 display or advances the setting. Holding the key down speeds up the incrementation.
-  **Down Key:** Each press of this key decrements values displayed on the No. 2 display or reverses the setting. Holding the key down speeds up the incrementation.

Selecting Menu Levels:

The following section describes how to access the various menu levels in the Omron controller.

- Operations Level: Press the **mode** key.
- Adjustment Level: Press and hold the **level** key for at least 1 second.
- Initial Setting Level: Press and hold the **level** key for at least 3 seconds.
- Protect Level: Press and hold the **level** key and the **mode** key simultaneously for at least 3 seconds.
- Advanced Function Setting Level: *(Note: in order to access this level, the ICPT setting in the protect level must be set at 0)* Index through the **initial setting level** and adjust the **AmoV** setting to "-169".

OPERATIONS for E5CN (Continued):

Mode Parameter Settings:

The Omron E5CN temperature controller has been programmed prior to shipment, so no additional programming is normally necessary. The table below shows the various controller settings for this unit when properly configured to operate the TYTAN inline heater.

The selections in **bold** indicate settings that have been changed from the original factory default for operation with the TYTAN inline heater.

Level	Parameter	Description	Setting
Operations Level	R-S	Run – Stop selection	RUN
	AL-1	Alarm value 1	100°C
	AL-2	Alarm value 2	90°C
Adjustment Level	LAdJ	Adjustment level	
	At	Autotune execute	OFF
	INS	Temperature input shift	0.0
	P	Proportion band	80**
	I	Integral time	233**
	D	Derived time	40**
	SPRt	SP ramp set value	OFF
	OL-H	MV upper limit	100.0
OL-L	MV lower limit	0.0	
Initial Setting Level	IN-t	Input type	7
	d-U	Temperature units selection	C
	SL-H	Set point upper limit	95
	SL-L	Set point lower limit	0
	CNtL	Control type (PID on/off)	Pid
	S-HC	Control type (standard or heating/cooling)	StNd
	St	Self-tune	OFF
	PtRN	Program pattern	OFF
	CP	Control period	1
	OREV	Operation direction (direct/reverse)	OR-R
	Alt1	Alarm 1 type	8
	Alt2	Alarm 2 type	8
	AMOV	Advanced function level	Set to -169

** The P, I and D values may change following the execution of Auto-tune.

Table 3: Omron E5CN Parameters

OPERATIONS for E5CN (Continued):

Level	Parameter	Description	Setting
Advanced Function Setting Level	INIt	Parameter initialize	OFF
	MSPU	Multiple set point uses	OFF
	SPRU	Set point ramp time unit	M
	AL IN	Alarm 1 output contacts	N-C
	ALH1	Alarm 1 hysteresis	0.1
	AL2N	Alarm 2 output contacts	N-C
	ALH2	Alarm 2 hysteresis	0.1
	ALFA	2-PID constant	0.65
	INF	Input digital filter	0.0
	PVAd	Additional PV display	OFF
	O-dP	MV display	OFF
	Ret	Automatic return of display mode	OFF
	A1Lt	Alarm 1 latch	OFF
	A2Lt	Alarm 2 latch	OFF
	PRLt	Protect level move time	3
	SERO	Output input error	OFF
	CJC	Cold junction compensation method	ON
	COLR	PV display color	Red
	PV-b	PV stable range	5.0
	A1ON	Alarm 1 on delay	0
	A2ON	Alarm 2 on delay	0
	A1OF	Alarm 1 off delay	0
	A2OF	Alarm 2 off delay	0
	IstP	Input shift type	INS1
	MVSE	Additional MV for stop/error	OFF
	AMAd	Auto/manual switching function	OFF
	Rt	Robust tuning	OFF
	Out1	Control output 1 assignment	0
	ALM1	Alarm 1 output assignment	ALM1
	ALM2	Alarm 2 output assignment	ALM2
	CSEL	Display text switch	ON
	CMOV	Move to calibration level	0
	Protect Level	OAPt	Operation/adjustment protection
ICPt		Initial/communication protection	0=unlocked
WtPt		Setting change protection	OFF
PRLP		Move to protect level	0

OPERATIONS for E5CN (Continued):

Changing Primary Set Point:




1. The process Set Point can be changed in the normal display mode.
2. Press the up and down arrow keys to select the desired setting.

After changing the process set point (SP-0) on the Omron controller, you must manually adjust the *SP2* setting on the Future Design *over-temperature control*. See OPERATIONS Over-Temperature Controller FDC-L91 section.

High Alarm:

The Omron E5CN temperature controller incorporates an independent high-temperature alarm. Alarm 1 (AL-1) prevents heater operation above a preset maximum temperature that may harm the process and potentially the tank material. If the process temperature exceeds the preset high alarm value, the heater will be disengaged and the audibly alarm will sound. The temperature controller will activate once the process temperature exceeds the set point by the preset value. The factory setting of this alarm temperature is 248°F (120°C).

The high alarm value can be adjusted to a lower setting through the operations level.

1. Press the mode key  to enter the operations level.
2. Press the mode key  to index through the operations level to the AL-1 setting.
3. Press the up or down key to adjust AL-1 to the desired setting.
4. Press the mode key  to index through the operations level to the AL-2 setting.
5. The AL-2 setting is normally set at 10°C below AL-1. Press the up and down keys to adjust AL-2 to the desired setting.
6. Press and hold the level key for a minimum of three seconds to return to the normal display.

OPERATIONS for E5CN (Continued):

PID Tuning:

The Omron E5CN temperature controller incorporates the capability of automatically tuning the PID parameters (Auto-Tuning) to fit the characteristics of the process. The optimum PID parameters are automatically set by forcibly changing the Manipulated Variable (MV) to calculate the characteristics (limit cycle method) of the control target. Depending on the auto-tune level selected, AT-1 or AT-2, the controller will run this test at either 40% or 100% of the actual Process Set Point. When the auto tuning is complete, the appropriate PID tuning parameters will be automatically installed into the non-volatile memory of the temperature controller.

1. Turn on water supply and set the desired water flow.
2. Set the Process Temperature Set point to the desired value.
(See OPERATIONS; Changing Primary Set point,.)
3. Press and hold the level key for a minimum of one second to enter the adjustment level.
4. Press the mode key to index through the adjustment level to get to the At setting.
5. Press the up or down arrow key to adjust the At value to 0N.
6. Press and hold the level key for at least 3 seconds to return to the normal display.
7. Turn the ENABLE HEATER switch past the ON position to the RESET position, then release the switch, which will move to the ON position. If all criteria for the various safety devices have been met, the heater will begin to heat.
8. When the process is complete, the appropriate PID tuning parameters will be installed and retained in the non-volatile memory.

OPERATIONS for SLC:

Safety Limit Controller (SLC) Model FDC-L91:

1. This over-temperature controller is located inside the electrical portion of the SH heater. It uses a separate temperature sensor to monitor the temperature on the surface of the heating elements.
2. This controller has two discrete set points:
 - SP2:** This is the over-temperature cutoff setting, which is set for 135°F (57°C).
 - HSP1:** This is an element high-temperature alarm setting, which is factory set at 145°F (63°C). Do not adjust this setting.



Figure 5: Over-temperature controller


Programming:

To Change the SP2 set point on the FDC-L91 over-temperature controller, follow the following procedure:

Do not change any of the other settings in this controller.

- 1) Turn the "Enable Heater" switch to the *Off* position. Leave the "Control Power" switch in the *On* position.
- 2) Open the door to the control-portion of the unit.

Caution: When the enclosure door is open, be careful not to touch the electrified components inside. To avoid shock hazard, this procedure should only be performed by qualified personnel.

- 3) Identify the over-temperature controller, tagged 1SLC.
- 4) Press the Index key () twice until "SP2" is highlighted.
- 5) Using the "▲" or "▼" buttons, adjust the SP2 value until it is 18°F (10°C) higher than the set point on the temperature controller.
Note: Do not change any other settings on this controller.
- 6) Close the door to the control portion of the enclosure.
- 7) Follow the procedure for "System Startup" (page 17) to start the heater.

Section 5: Operation

System Start-Up:

After completing installation, the following calibrations must be performed before operating the heater.

- 1) Check the switch positions on the control interface (if supplied).

Caution: All switches should be in the off position.

- 2) Turn on process gas/liquid at its supply source.
- 3) Engage electrical supply at customer's source. Ensure that OPTIONAL circuit breaker(s) are in the "ON" position.
- 4) Engage the "CONTROL POWER" switch on the control panel. At this time the temperature controller and all optional displays will come on.

Note: Temperature controller set point should be set to "0" at this time to prevent accidental heater engagement during calibration procedures. Reference temperature controller section if required.

Normal Operation:

Normal operation of the SH inline heater system will consist of the following steps:

- 1) Initiate process flow.
- 2) Make sure that the "Off-On-Reset" switch is in the "Off" position.
- 3) Energize the unit by turning on the Electrical Disconnect.
- 4) Turn the "Control Power" switch to the "On" position.
- 5) Adjust the desired set point on the temperature controller.
- 6) Turn the "Off-On-Reset" switch all the way to the "Reset" position and release to the "On" position. If all safety circuit requirements are satisfied, the heaters will operate at this point.

Note: If the temperature set point is changed, it is necessary to recalibrate the temperature controller.

Shut Down Procedure:

- 1) Turn "Off-On-Reset" switch to "Off".
- 2) Allow heater to cool below 95°F (35°C).
- 3) Turn Main Power OFF.

Section 6: Service and Maintenance:

Maintenance:

Normal maintenance of SH inline heaters consists of the following:

- 1) Replace the heater control relays and fan after approximately 24-30 months of use. Actual life expectancy varies with application conditions such as hours of operation, control tuning parameters, applied voltage and amperage.
- 2) The Solid State Relay fan should be replaced and the heat sink is to be cleaned every 24 months.

Service Policy:

Process Technology supports its product line with a strong technical support and field service program. If SH inline heater fails to perform properly, follow the outlined steps for resolution.

Note: If the unit was damaged in transit, contact the freight carrier directly. Process Technology is not responsible for shipping damage.

- 1) Verify connections and program parameters.
- 2) Contact the Process Technology Technical Service Group. When placing this call, please have available the model number and serial number of the unit (located on the system tag), information about the application of the equipment, and information regarding the chemical constituents of the process fluid. The Service Technician will evaluate the situation and determine a course of action for troubleshooting and repair.
- 3) If the Technician determines that the unit should be returned to the factory for evaluation, a Return Material Authorization (RMA) Number will be issued. A return will not be accepted without prior authorization.

Note: Equipment must be returned to Process Technology within 30 days of return authorization.

Typically, the SH inline heater will not have been exposed to chemicals. However, Process Technology personnel are instructed to handle any returned equipment as if it contains residual chemicals. A package containing returned equipment **will not be opened** until chemical information is received. Therefore, Process Technology requires that the following procedures be followed for **all** returns, whether or not they are likely to contain chemical residues.

To protect the safety of Process Technology's workers and any others that may come in contact with this equipment in the course of transport, evaluation, and repair, Process Technology requires that these practices be followed in returning the equipment to the factory:

- 1) Rinse the equipment until it is free of any chemical residues and drain any fluid from elements and piping. This is required for safe transport and handling of the equipment.
- 2) Wrap the unit in plastic and secure. Make sure that it does not leak. (Process Technology is not responsible for damage caused by leakage during shipping.)
- 3) Carefully package the unit for shipment.
- 4) Indicate the type of chemical (this includes DI Water) that was in use at the time of failure. Include this information on the packing slip or place the information on the outside of the box. Process Technology will not risk exposure of its personnel to unknown chemicals. A return will not be evaluated until chemical information is received.
- 5) Clearly mark the outside of the box with the RMA number.
- 6) Ship the component to Process Technology via prepaid freight.

Upon receipt of a returned unit, Process Technology will follow these steps:

- 1) The equipment will be carefully unpacked, inspected and cleaned, and an evaluation will be done.
- 2) A Process Technology technician will contact the customer with information regarding the scope of work to be performed, the cost, and the amount of time needed.
- 3) After a purchase order and authorization to perform the repair are received, the repairs will be completed and the unit returned.
- 4) If the returned unit has been used in a chemical application and Process Technology determines that it is not repairable, the equipment will be returned at Process Technology's expense to the customer site for proper disposal.

Warranty:

All products and components not manufactured by Process Technology will carry the original manufacturer's warranty, copies of which are available upon request. Process Technology makes no warranty or representation, expressed or implied, with respect to the products not manufactured by Process Technology.

Process Technology industrial products are warranted against defects in materials and workmanship for a period of one year from date of shipment and this is applied on a pro-rated basis. At its option, Process Technology will repair or replace defective equipment.

Users are responsible for the suitability of the products to their application.

Process Technology disclaims responsibility for failure arising from misuse, negligence, improper installation, tampering or other operating conditions beyond its control (such as low solution level.)

Products must be installed and maintained in accordance with Process Technology instructions.

Process Technology is not liable for labor costs incurred in removal, reinstallation, or unauthorized repair of the product or for damage of any type including incidental or consequential damage.

Process Technology neither assumes or authorizes any representative of Process Technology or any other person to assume for it any other liabilities in connection with the sale of the products. This warranty may not be verbally changed or modified by any representative of Process Technology.

Damages

Claims against freight carriers for damage in transit must be filed by the buyer at the time of delivery if possible.

Returns

No product shall be returned to Process Technology without first obtaining return authorization from a Process Technology representative. All returns must be freight prepaid. Freight collect or shipments without authorization will be refused.

Information

Process Technology will endeavor to furnish such advise as it may be able to supply with reference to the use by buyer or any material purchased, but Process Technology makes no guarantees and assumes no obligation or liability for advice given verbally or in print or the results obtained. Buyer assumes all risk and liability which may result from the use of any material, whether used by itself or in combination with other products. No suggestion for product use shall be construed as a recommendation for its use in infringement on any existing patent.

Cancellation

Process Technology will not accept cancellation or changes to orders that are in production or scheduled for production. At Process Technology's option, changes or cancellations may be made upon payment of reasonable cancellation charges that take into account expenses already incurred and commitments made by Process Technology.

Conflict Between Documents

Acceptance of this offer is expressly conditioned upon agreement to all terms and conditions contained herein. In the event of a conflict between the terms and conditions of purchaser's purchase order, and Process Technology's terms and conditions, proposal or offer, the latter shall govern.